INSTALLATION - F.M. BASE

1. REMOVE THE FRONT AND REAR COVERS FROM THE BASE. THE PLASTIC REAR COVER IS SECURED WITH 4 SCREWS TOWARD THE OUTER SIDE EDGES. THE METAL FRONT COVER IS RETAINED BY 5 SCREWS.

   REMOVE THE BASE FROM THE SHIPPING PALLET.

2. POSITION THE BASE OVER THE UTILITIES PLUMBING IN THE DESIRED LOCATION AND SECURE IT TO THE FLOOR AT THE FOUR CORNERS, USING FLAT WASHERS AND LAG BOLTS. USE ANCHOR INSERTS (SUPPLIED) FOR MASONRY FLOORS OR OTHER SUITABLE FASTENERS AS FLOOR CONTRUCTION REQUIRES.

3. INSTALL ASSISTANT'S CONSOLE ON F.M. BASE AND LEVEL ACCORDING TO INSTRUCTIONS PACKED WITH UNIT.

NOTE ▶ SHIMS ARE PROVIDED FOR PLACEMENT UNDER BASE AS NECESSARY TO LEVEL BASE. THE ANCHOR INSERTS SUPPLIED REQUIRE A HOLE 5/16" IN DIAMETER, AT A MINIMUM OF 2 3/4" DEEP.

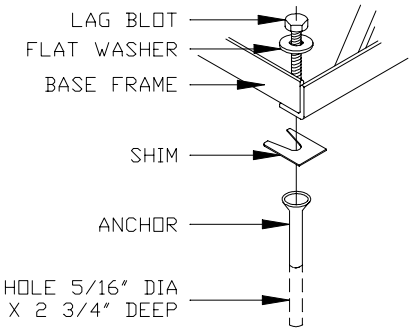

NOTE: IF THIS FM BASE IS INSTALLED WITH A POST MOUNTED CUSPIDOR, THE CUSPIDOR UMBILICAL WILL NEED A .12 WIDE X 2.00 LG SLOT CUT IN THE FM BASE END TO ROUTE THRU THE Ø1.50 HOLE IN SKIRT. BE CAREFUL NOT TO CUT ANY OTHER TUBINGS EXCEPT THE 1 1/4 ID UMBILICAL TUBING. THE CUT UMBILICAL SHOULD NOW THREAD EASILY INTO THE Ø1.50 HOLE. ROUTE UMBILICAL THRU HOLE ON THE SIDE NEAREST THE FOOT END OF CHAIR.

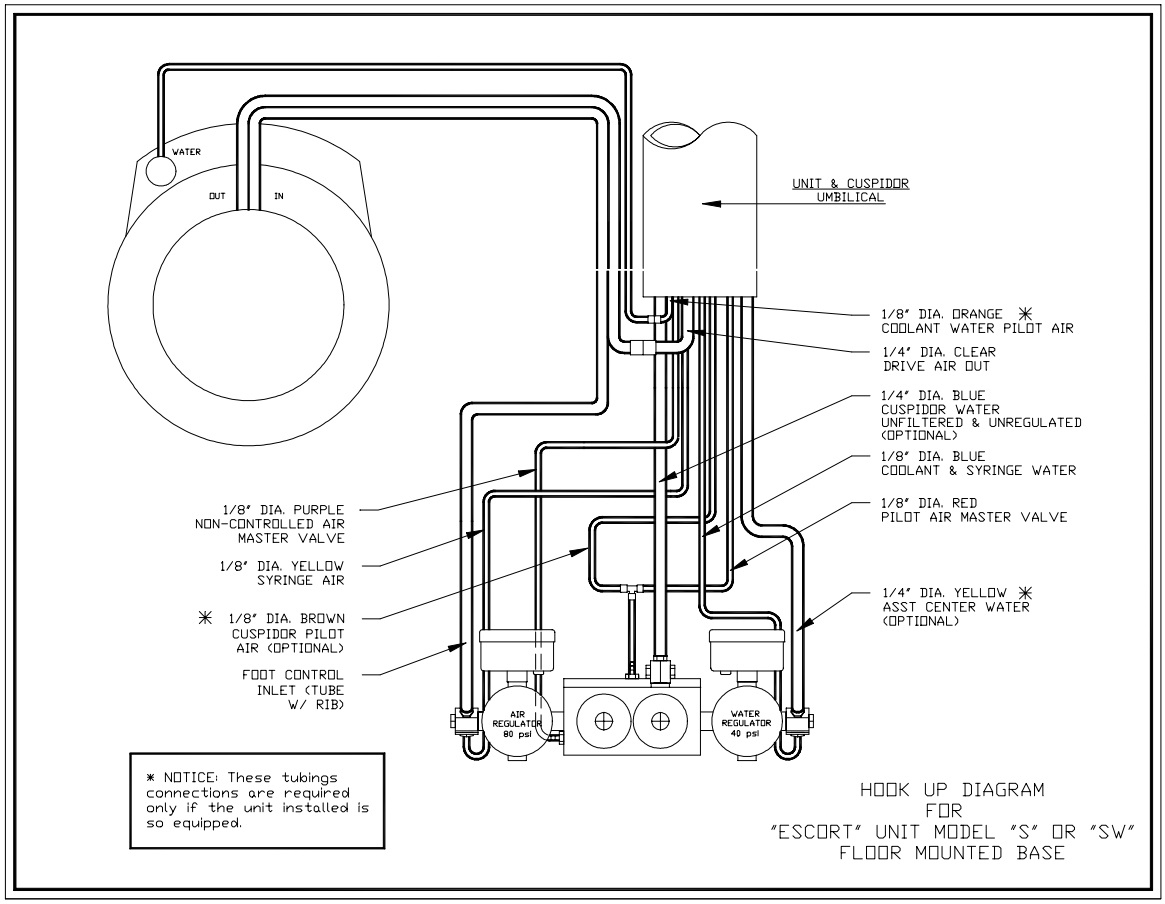
WATER
OUT
IN
UNIT & CUSPIDOR UMBILICAL
1/8" DIA. ORANGE ✳ COOLANT WATER PILOT AIR
1/4" DIA. CLEAR DRIVE AIR OUT
1/4" DIA. BLUE CUSPIDOR WATER UNFILTERED & UNREGULATED (OPTIONAL)
1/8" DIA. BLUE COOLANT & SYRINGE WATER
1/8" DIA. RED PILOT AIR MASTER VALVE
1/4" DIA. YELLOW ✳ ASST CENTER WATER (OPTIONAL)
1/8" DIA. PURPLE NON-CONTROLLED AIR MASTER VALVE
1/8" DIA. YELLOW SYRINGE AIR
✳ 1/8" DIA. BROWN CUSPIDOR PILOT AIR (OPTIONAL)
FOOT CONTROL INLET (TUBE W/ RIB)
AIR REGULATOR 80 psi
WATER REGULATOR 40 psi

✳ NOTICE: These tubings connections are required only if the unit installed is so equipped.

HOOK UP DIAGRAM
FOR
"ESCORT" UNIT MODEL "S" OR "SW"
FLOOR MOUNTED BASE

Knight®
by Midmark
Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542